

Operating your SAMSUNG Refrigerator

USING THE CONTROL PANEL



Temperature & Function select¹⁾ control panel

Temperature Select	Pressing the temperature selector, set will rotate and will change function only when it is needed.
Temperature Freeze Select	Press the button to freeze food quickly. Press it again to cancel it automatically.
Temperature Select	Press it once to set the temperature.
Temperature Select	Press the button to set the freezer temperature (default: -18°C) automatically in the refrigerator & freezer.
Temperature Select	Press the button to set the refrigerator temperature (default: 3°C) automatically in the refrigerator & freezer.
Temperature Select	Press the button to cancel the function for long periods. Press it again to cancel it automatically in the refrigerator & freezer.
Temperature Select	Press the button to set the default for auto defrost setting. It will stop when it is set back, but the function will remain on.